





### Horizontal Curve 700

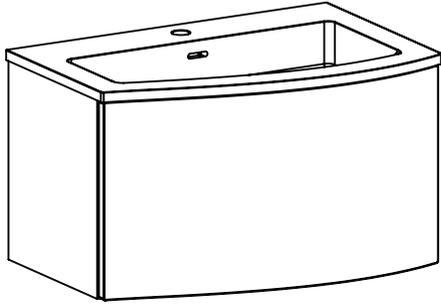


1 x Hanger Set RH & LH

### Vertical Curve 550

Vertical Curve 1100 = 2 x Vertical Curve 550

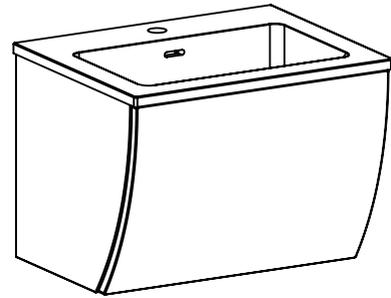



1 x Hanger Set RH & LH

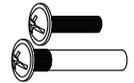


2 x Connecting Bolt Set (for use in 1100 only)

### Horizontal Curve 1200

500 add on for Horizontal Curve 700

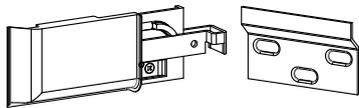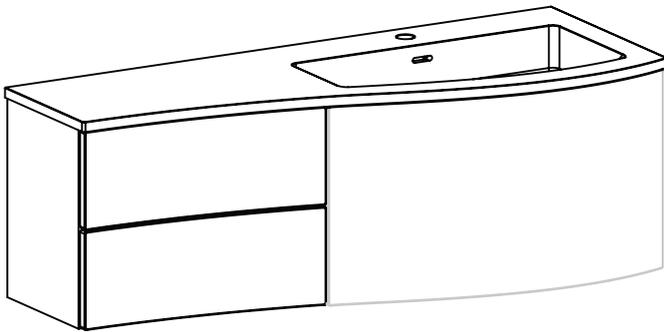

1 x Hanger Set RH & LH

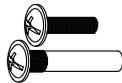


2 x Connecting Bolt Set

Images for illustration purpose only.

### Tools Required (NOT Supplied)



#### Drill and drill bits

Required when securing the cabinet to a wall. Use an appropriate size bit to match the wall fixing chosen (wall screws and fixings not supplied)

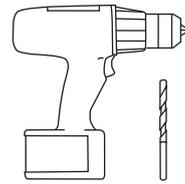

Tape Measure

#### Cross Head Screwdriver

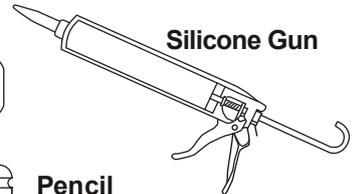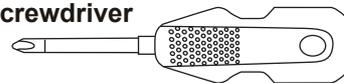

Silicone Gun

#### Spirit Level





#### Pencil



### Push to Open Slow Close Drawers

For best results the push to open and slow close mechanisms are activated with a firm push in the center of the drawer front. If not pressed firm enough when opening, the drawer may fail to release out of the unit.

Closing the draw is best achieved from a fully extended runner. If not pushed with enough force this may cause the drawer to bounce back off the mechanism, rather than activating the slow close.

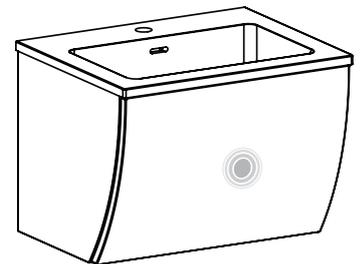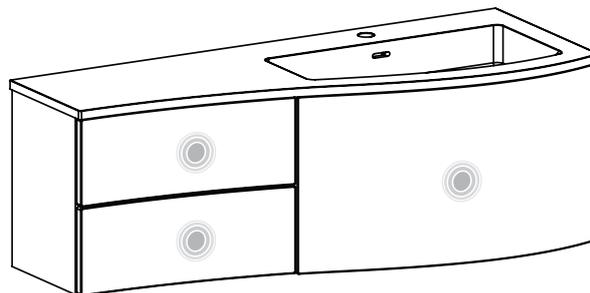

### Before you start carefully read the instructions.

Check the pack and make sure all the components are included. When you are ready to start make sure you have the right tools to hand, plenty of space and a clean dry area for building. Don't rush, read the instructions first and run through them before you begin.

Keep fittings together to avoid loss. Do not over tighten screws or bolts.

**CLEANING** Use mild soap and water only. Do not use washing powders or any other types of abrasive cleaner. See aftercare instructions.

#### IMPORTANT

If you are at all unsure of any part of the instructions shown in this document we recommend that you contact a reputable qualified trades person.


If a part is missing or damaged, please call **01535 613 830**  
Please have your instruction guide ready.

**0W30/450 20180820**




1

Remove the drawer from the unit. Extend the drawer all the way out and lift up the front, gently removing the drawer from the carcass

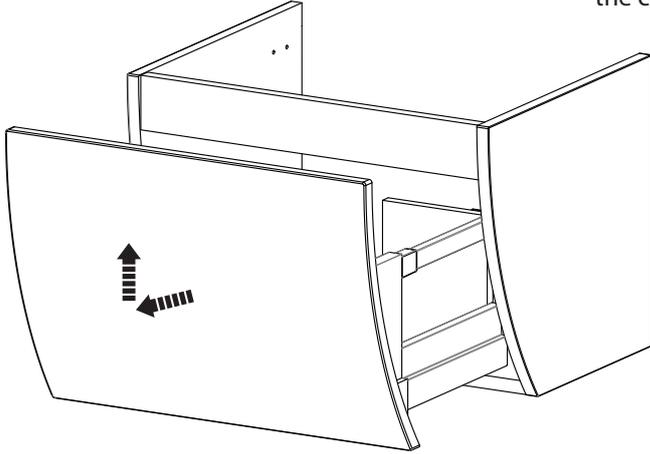


2

Attach the cabinet hangers to the sides of the carcass

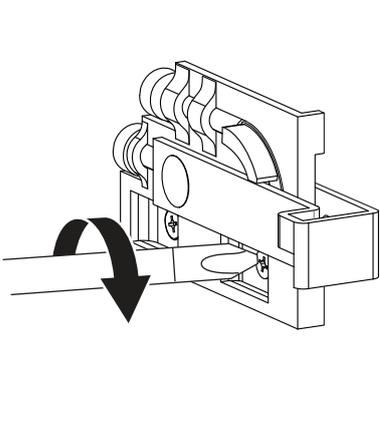


3

Measure the internal width (d) of the carcass and attach wall brackets to the wall using suitable wall fixings, not supplied, at the required height.

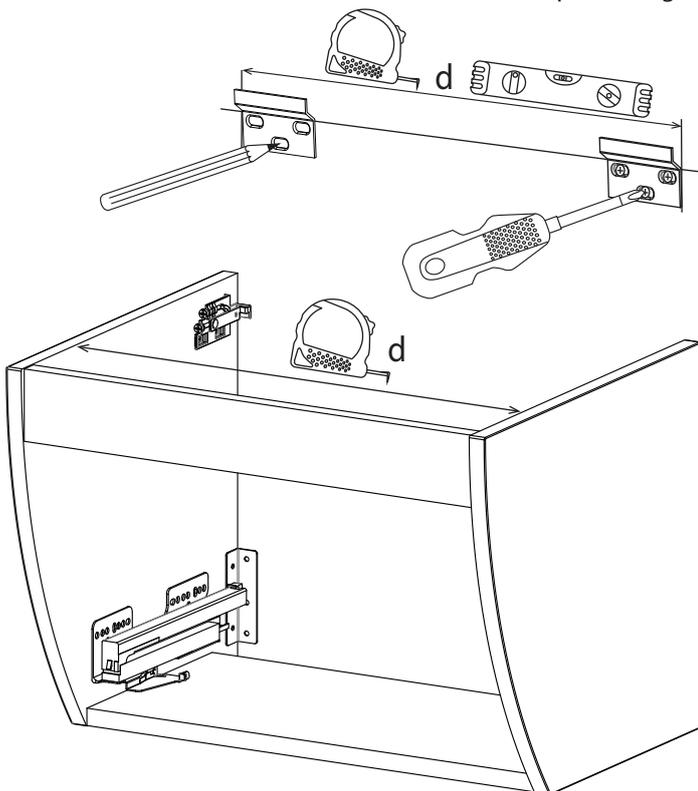


4

Gently lift the unit into place, making sure it is secure before letting go.

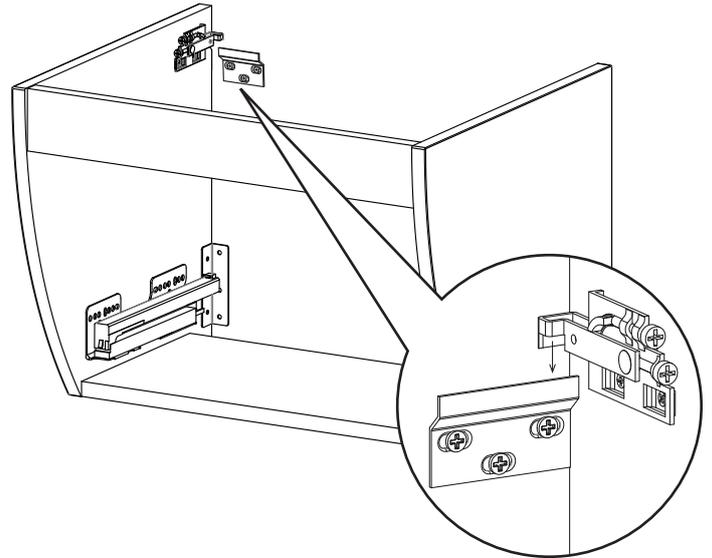


5

Using a spirit level check the cabinet is level and plumb. Adjust the cabinet hanger as show, using the top screw to alter the vertical adjustment and the bottom screw to secure the unit to the wall once the unit is level. Once you are happy that the unit is level place the covers over the cabinet hangers.

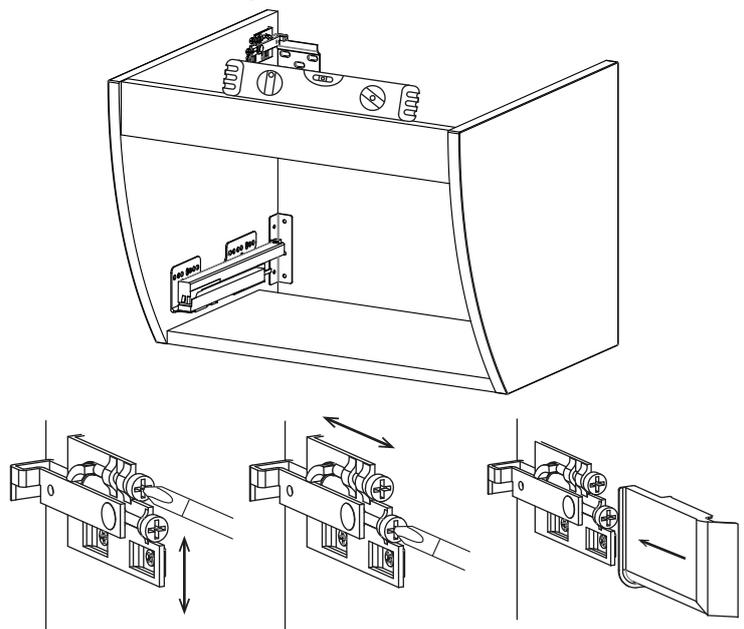

6


Secure the unit to the wall through the heavy duty brackets using suitable wall fixings, not supplied.

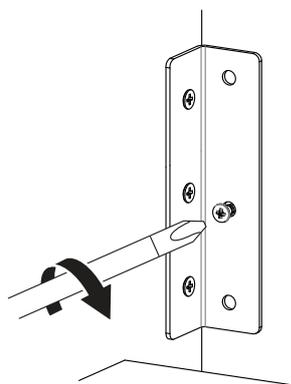


When hanging the second unit make sure they butt up next to each other.

Once they are in place and secured to the wall, mark out the positions for the connecting bolts, making sure they don't clash with any other component. It is recommended that when attaching the units for the 1200 vanity, this drilled from the 500 unit into the 700


unit into the 700. Drill using a suitable size drill bit, it is recommended a scrap piece of board is used to prevent break through.

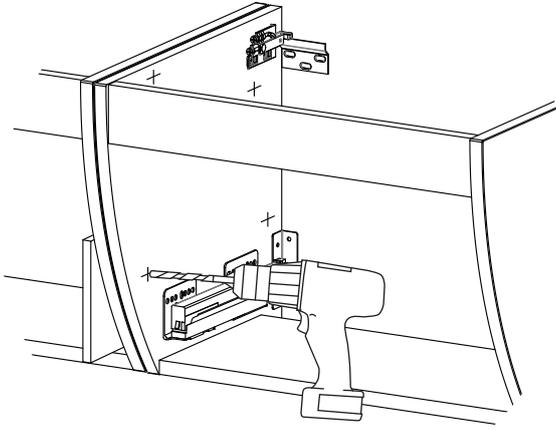

Join the two units together using the connecting bolts.

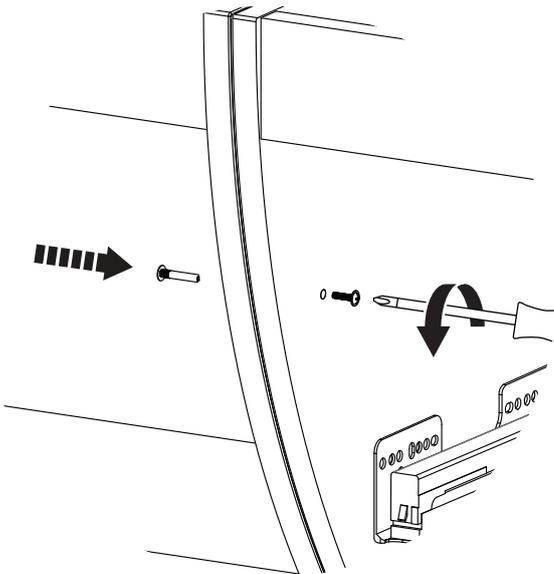

Insert the drawer back into the carcass. Fully extend the runners and lower the drawer into place. Push the drawer all the way in; you will hear it clicking into place.

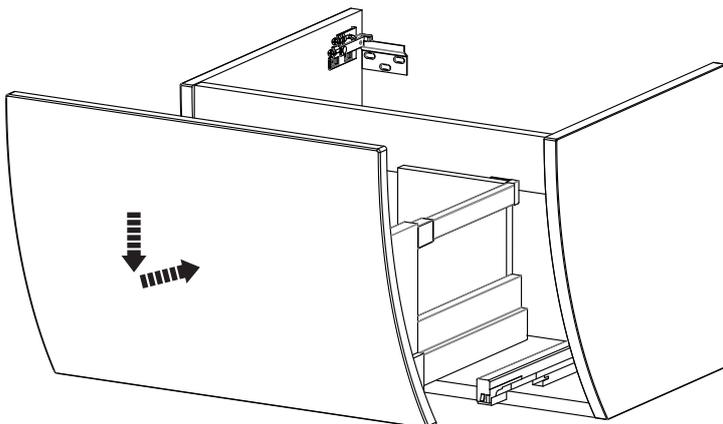


Adjust the drawer box/front as shown.

Some of these may be easier to access by removing the drawer from the unit.


Push to open strength

For best results move the tab to the top (3 dot) position.

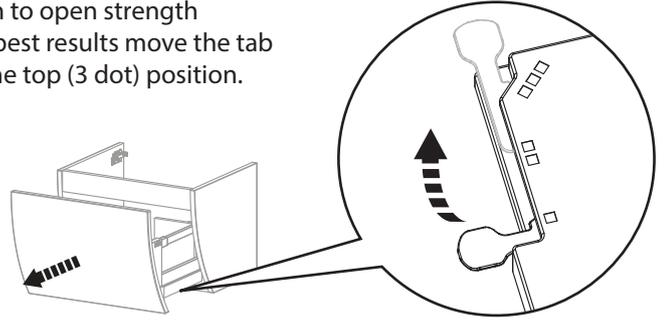

Push to open clearance


To alter the gap between the drawer front and the carcass, adjust the thread as shown.

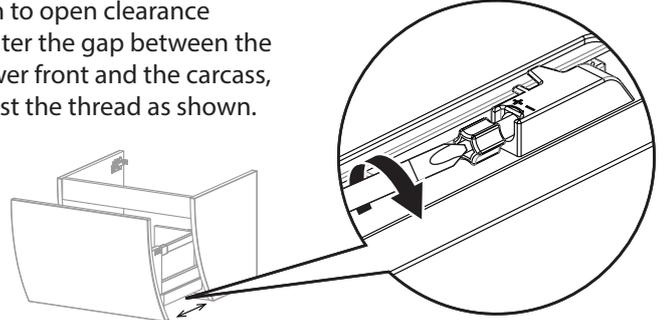

Clearance equaliser


700 & 550 units only

To even up the gap between the drawer front and the carcass, adjust the thread as shown.

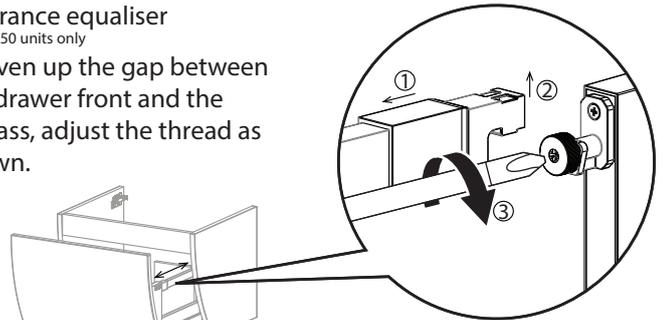


Drawer Front Up and Down

To move the front up and down and level the drawer front.

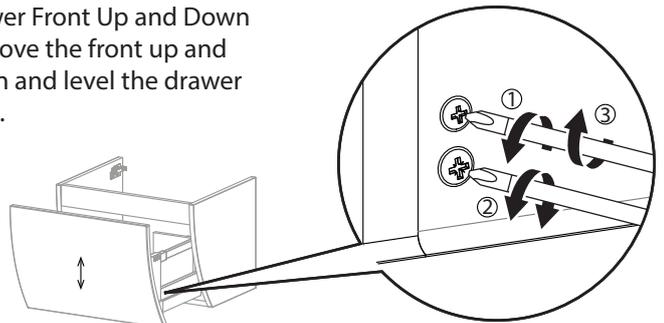

Silicone around the top of the unit and lower the basin into position. You may wish to also silicone where the unit and the basin meet the wall, and where the basin meets the worktop.

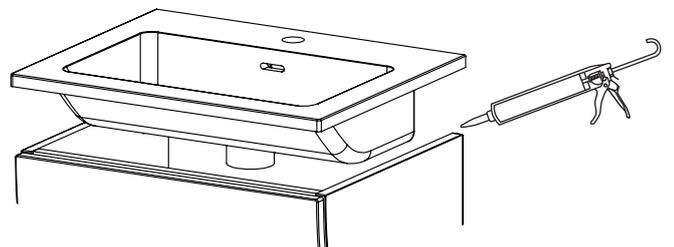

We recommend that you read the sealant packaging for the curing time. Do not use until the sealant is set.