

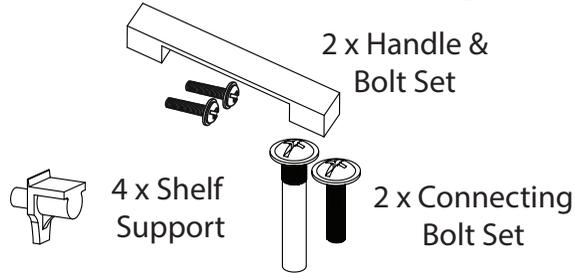


L-Shape

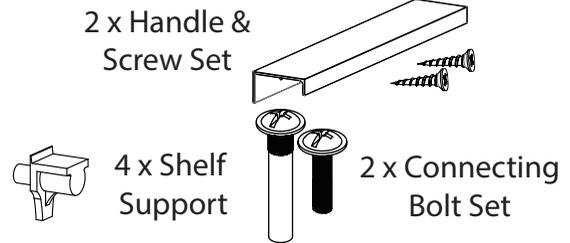

Combination


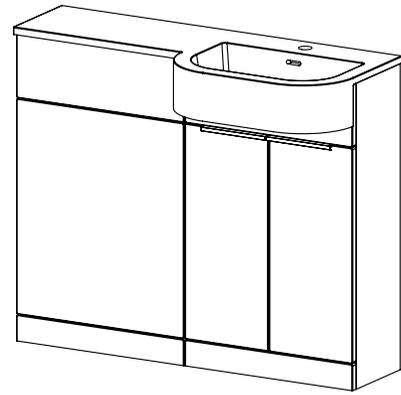


Images for illustration purpose only.


Tools Required (NOT Supplied)

Drill and drill bits

Required when securing the cabinet to a wall. Use an appropriate size bit to match the wall fixing chosen (wall screws and fixings not supplied)

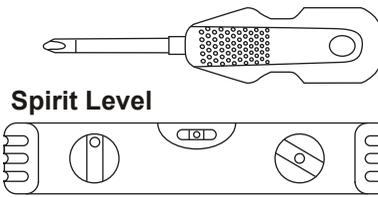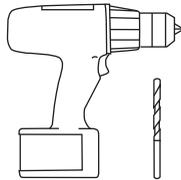

Cross Head Screwdriver

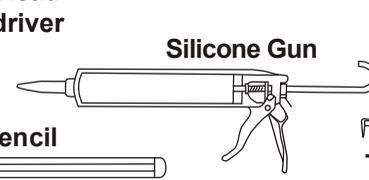

Silicone Gun

Pencil



Tape Measure

Before you start carefully read the instructions.

Check the pack and make sure all the components are included. When you are ready to start make sure you have the right tools to hand, plenty of space and a clean dry area for building. Don't rush, read the instructions first and run through them before you begin.

Keep fittings together to avoid loss. Do not over tighten screws or bolts.

CLEANING Use mild soap and water only. Do not use washing powders or any other types of abrasive cleaner. See aftercare instructions.

IMPORTANT

If you are at all unsure of any part of the instructions shown in this document we recommend that you contact a reputable qualified trades person.




If a part is missing or damaged, please call **01535 613 830**
Please have your instruction guide ready.
W30/283 V3 20180802




1

Remove all the front from the units.

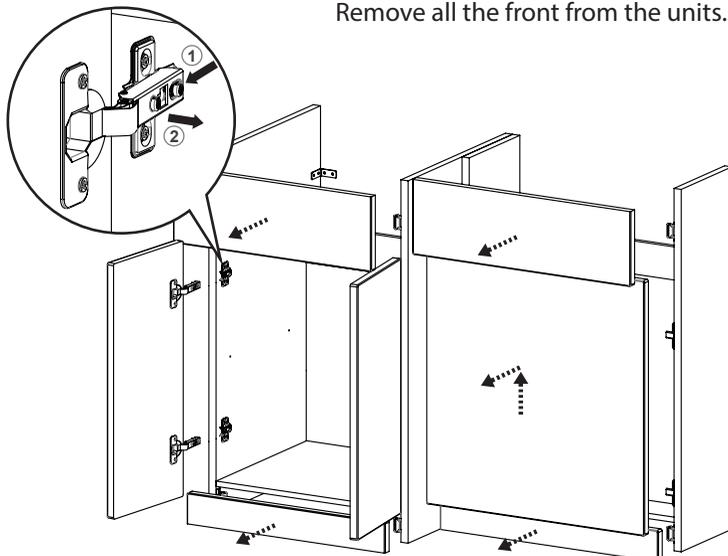


2

Attach the units to the wall using suitable wall fixings (not supplied), making sure the units are tightly pushed together.

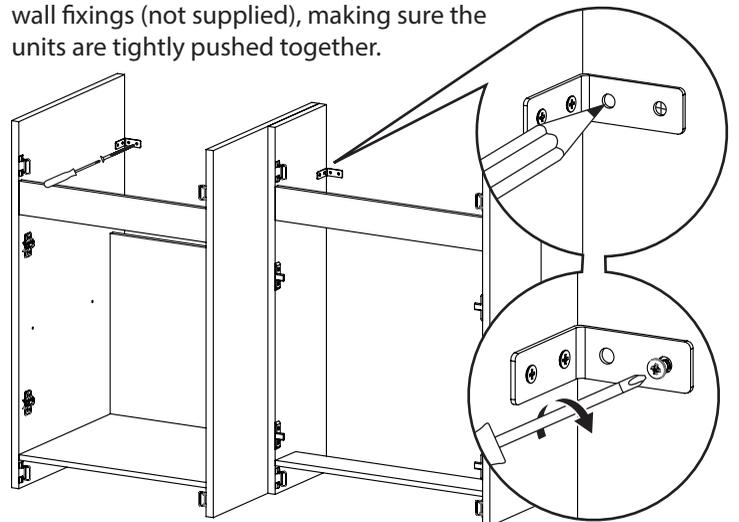


3

Secure the units together, drilling through from one unit into the other using a suitable size drill bit for the connecting bolts, making sure the position doesn't clash with any components in the other unit. It is advised a piece of scrap is used to prevent breakout. It is good practice to clamp the 2 sides together. You may wish to position these so they are hidden by the fascia and shelf.

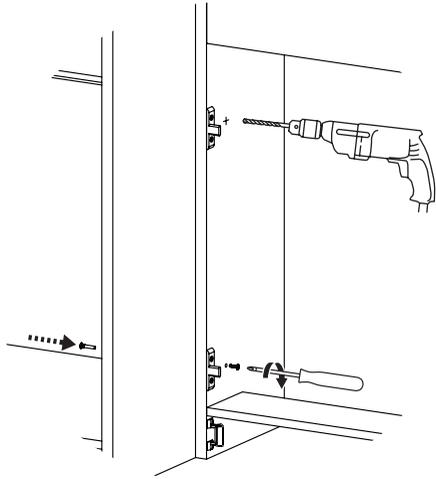


4

L-Shape

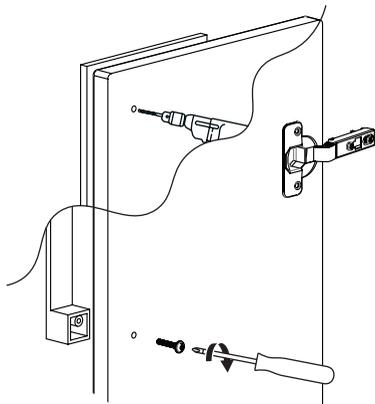

Mark out and drill handle positions. It is advised that a piece of scrap is placed beneath the door when drilling to prevent breakout. Attach the handles using the handle bolts provided. Left hand door shown.


Combination

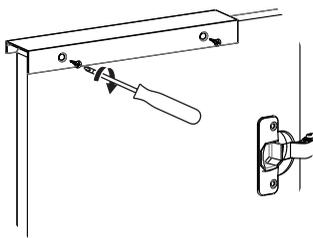

Attach a handle to each door using the screws provided. Left hand door shown.


Combination P-Shape Basin only 5

Cut the fascia to fit the P-shape basin

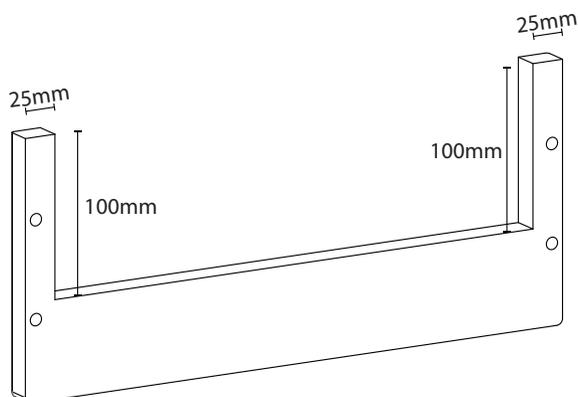


6

Replace all the fronts on the units.

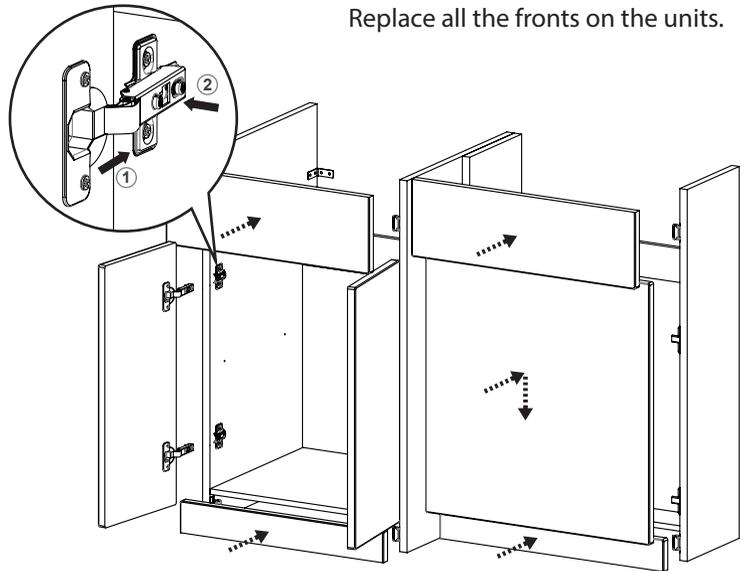


Adjust hinges as shown below.

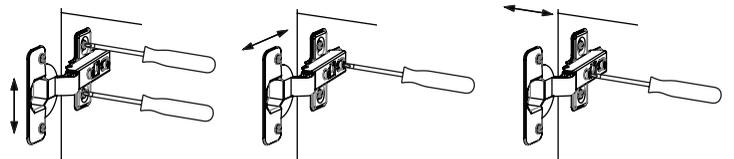


7

Insert the shelf pegs at the required height and lower shelf into position.

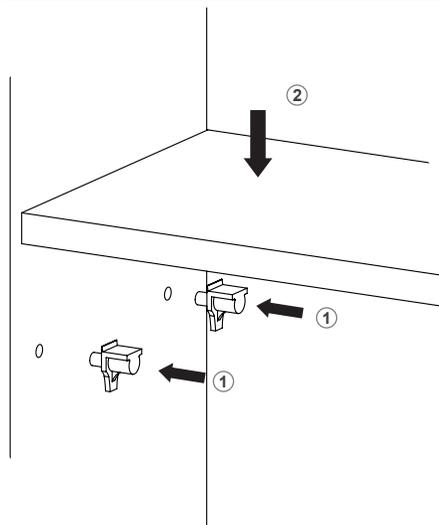

8

Place a bead of silicone around the top of the units and lower the basin into place. You may wish to also silicone where the unit and the basin meet the wall and where the basin meets the worktop.

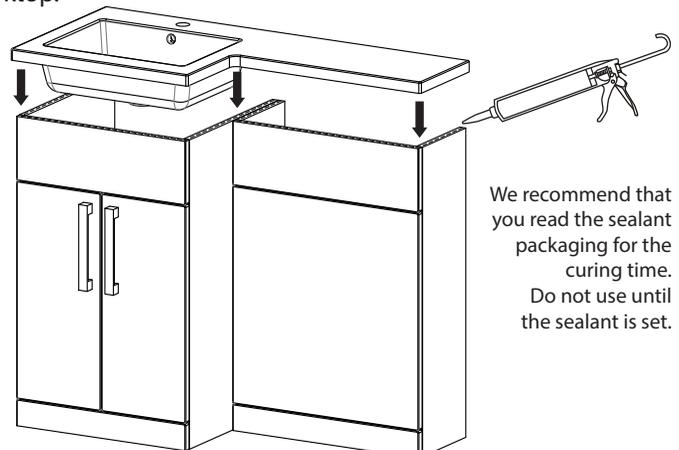

We recommend that you read the sealant packaging for the curing time. Do not use until the sealant is set.